



Figure 1: FLEX Multibus CAN module

Jumper	pos. 1-2	pos. 2-3
JP1	LOOPBACK	-

Note: Default jumper settings are indicated with grey background

CON 1	
Pin 1	+5V
Pin 2	RX_CAN
Pin 3	TX_CAN
Pin 4	GND

CON 3	
Pin 1	-
Pin 2	CAN+
Pin 3	CAN-
Pin 4	-
Pin 5	GND